





Original	Sustituto
Standby	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
OSD	Display / Media
4	4
5	5
6	6
Audio	Audio / Lang I/II
7	7
8	8
9	9
Angle	Info / Angle
10/0	0
10+	Guide / EPG / -/--
Goto	Text / Goto

Original	Sustituto
Subtitle	Subtitle / EQ
Setup	Setup / OPT /
Up	Up
Zoom	Zoom / Size
Left	Left
OK	OK
Right	Right
Title	Sound / Title
Down	Down
Menu	Menu / Home
L/R	CH+ / Page+
Play	Play / Slow
Pause	Pause / Step / Freeze
Vol+	Vol+
Stop	Stop / Hold
Mute	Mute / Dimmer
N/P	CH- / Page-





Original		Sustituto	
	Step	 + 	Shift + Pause / Step /
	Slow	 + 	Shift + Play /
	Vol-		Vol-
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Prog		TV/Radio /
	Return		Back / Return
	<<		<< / Tune-
	>>		>> / Tune+
	Clear		Exit / Cancel / Clear
	DVD/USB		AV / Input / RDS
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	RAN		Blue / Prime Video / Random
	PBC		Smart / List

Original	Sustituto

