



 

 



 








 



 
 
 
 
 

 









Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/---	 Guide
 Swap	 Back
 TV/AV	 AV
 Game	 Smart
 Text	 Text

Original	Sustituto
 Menu	 Menu
 P.Std	 Format
 S.Std	 Dual
 P+	 Ch +
 P+	 Up
 P-	 Ch -
 P-	 Down
 V+	 Vol +
 V+	 Right
 V-	 Vol -
 V-	 Left
 Red / Picture	 Red
 Green / Sound	 Green
 Green / Sound	 Shift + Dual
 Yellow / Time	 Yellow
 Blue / Setup	 Blue
 Blue / Setup	 Options





Original	Sustituto	Original	Sustituto
INDEX White / Index	DISPLAY INFO Info		
REVEAL Reveal	PLAY MODE ▶ Play		
ZOOM Zoom	ZOOM ▲ Eject		
EAST/WEST East/West	⏸ Pause		
MIX Mix	E-MANUAL D.MENU D. Menu		
LOCK Lock	ECO 3D 3D		
CANCEL Cancel	CLEAR EXIT Exit		
HOLD Hold	■ Stop		
SUBCODE Subcode	AD SUBT Subt		

Original	Sustituto

