

 
 
 

 


 
 
 

 
 

 
 
 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Source	 AV
 Sound	 Shift + Dual
 Picture	 Format

Original	Sustituto
 Audio 1/2	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Sleep	 Sleep
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Index	 Back





Original	Sustituto	Original	Sustituto
 Text	 Text		
 List	 List		
 Hold	 Smart		
 Subtitle	 Subt		
 Info	 Info		
 Cancel	 Exit		
 Reveal	 TV/R		
 Zoom	 Eject		

Original	Sustituto

