 



 











 





 



 



 



 

 

 




 
 







 
 





 

 

 



 







Original	Sustituto	Original	Sustituto
 Standby	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Up	 Up
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Left	 Left
 5	 5	 Vol-	 Vol-
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Vol+	 Vol+
 9	 9	 Down	 Down
 FAV	 Fav / Marker / PC	 CH-	 CH- / Page-
 0	 0	 Text	 Text / Goto
 Recall	 Back / Return	 Red	 Red / Netflix / Search
 Audio	 Audio / Lang I/II	 Green	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ	 Pause	 Pause / Step / Freeze
 Info	 Info / Angle	 Tv/Radio	 TV/Radio /





Original	Sustituto	Original	Sustituto
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

