 

 





 







 

 
 
 
 
 















Original	Sustituto	Original	Sustituto
 Power	 Power		
 Bluetooth / AUX	 7		
 Bluetooth / AUX	 9		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 Vol+	 Vol+		
 Play / Pause	 Play / Slow		
 Play / Pause	 Pause / Step / Freeze		
 Vol-	 Vol-		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Dislike	 CH- / Page-		
 Like	 CH+ / Page+		

