



 








Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up/CH+	 Up
 Down/CH-	 Down
 Right	 Right

Original	Sustituto
 Left	 Left
 OK	 Ok
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 SAT	 Smart
 FAV	 Pre Ch
 EPG	 Guide
 []/♪	 Dual
 Tv/AV	 AV
 Play	 Play
 Pause	 Pause
 Back	 Back
 UHF	 TV/R
 i	 Info
 PAL/NTSC	 Format





Original		Sustituto	
 AUDIO	Red/Audio	 A	Red
 POSITION	Green/Position	 B	Green
	Yellow/[...]	 C	Yellow
 AUDIO R/L	Blue/Audio R/L	 D	Blue

Original		Sustituto	

