 















 



 
 



 
 

 
 






 



 



 


 
 



 



 



 















 







 


 



 










 

 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Tv Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 0	 0
 DTV	 Shift + 1	 Recall	 Back / Return
 DTV	 TV/Radio /	 Vol+	 Vol+
 Radio	 Shift + TV/Radio / Program	 P.Mode	 Picture / Format
 Radio	 Shift + 6	 CH+	 CH+ / Page+
 USB	 Shift + 8	 S.Mode	 Sound / Title
 DVD	 Shift + 2	 Vol-	 Vol-
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Source	 AV / Input / RDS





Original	Sustituto
	 Down
	 Info / Angle
	 Shift + Picture / Format
	 Sleep / Timer
	 Audio / Lang I/II
	 Subtitle / EQ
	 Text / Goto
	 Shift + Stop /
	 Zoom / Size
	 Display / Media
	 Shift + Power
	 D.Menu / Top
	 Rec / Rec Mode
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Eject / Surround

Original	Sustituto
	 Setup / OPT /
	 Smart / List
	 << / Tune-
	 >> / Tune+
	 Pause / Step / Freeze
	 Play / Slow
	 Shift + Text /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Shift + Yellow / YouTube /
	 Yellow / YouTube / Repeat
	 Shift + Info / Angle
	 Blue / Prime Video / Random
	 Shift + Green / APP /

