 


 
 




 
 



 



 



 



 
 


 



 



 


 
 



 















 









Original		Sustituto		Original		Sustituto	
	Power		Power		AUX		Yellow
	⏪ ⏩		Options		C/S		Exit
	⏪ ⏩		Dual		0		0
	●		Down		1		1
	TV		TV/R		2		2
	●		Left		3		3
	▾		Smart		4		4
	⊕		Sleep		5		5
	●		Right		6		6
	*		Up		7		7
	SOL		Red		8		8
	FA		Green		9		9
	Mute		Mute		P+		Ch +
	Vol-		Vol -		P-		Ch -
	Vol+		Vol +		N / E		Ok
	ME		Media		≡?		Play
	AV		AV				Pause



