 



 

 

 



 



 

 

 



 



 



 



 



 

 

 



 



 





 

 









 




Original		Sustituto		Original		Sustituto	
	Power		Power		Index		D.Menu / Top
	Mute		Mute / Dimmer		Reveal		Setup / OPT /
	Play		Play / Slow		Text		Text / Goto
	Pause		Pause / Step / Freeze		AV/Source		AV / Input / RDS
	Stop		Stop / Hold		Menu		Menu / Home
	Rec		Rec / Rec Mode		Up		Up
	<<		<< / Tune-		i/Info		Info / Angle
	>>		>> / Tune+		Left		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Audio		Audio / Lang I/II		Down		Down
	Subtitle		Subtitle / EQ		Back		Back / Return
	P.Mode		Picture / Format		Vol+		Vol+
	Size		Zoom / Size		Rec List		Smart / List
	Sleep		Sleep / Timer		CH+		CH+ / Page+
	Tv/Radio		TV/Radio /		Vol-		Vol-





Original	Sustituto
 ATV	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Sustituto
 Blue	 Blue / Prime Video / Random
 Power/Display	 Shift + Power
 Hold	 Shift + Stop /
 Aspect	 Shift + Picture / Format
 USB	 Shift + 8

