


 

Original	Sustituto
Power TV	Power
1 TV	1
2 TV	2
3 TV	3
4 TV	4
5 TV	5
6 TV	6
7 TV	7
8 TV	8
9 TV	9
0/-- TV	0
AV TV	AV
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Return TV	Back
PR+ TV	Ch +

 
 
 
 

 
 
 

 

 

 

 

 

 

 

 

 

 

 

 


Original	Sustituto
PR- TV	Ch -
Play TV	Play
<< TV	<<
>> TV	>>
Record TV	Rec
Stop TV	Stop
Pause TV	Pause
Exit TV	Exit
Menu TV	Menu
Violet/Text TV	Text
Red/Presets TV	Red
Green/List TV	Green
Yellow/Info TV	Yellow
Blue/Guide TV	Blue
Up TV	Up
Down TV	Down
Right/Zoom+	Right




TV



Original	Sustituto
 Left/Zoom- TV	 Left
 OK TV	 Ok
 TV	 TV/R
 Demo TV	 Pre Ch
 VCR	 Smart
 SAT	 Media
 DVD	 Options
 AUX	 Format
 AMP	 3D
 Power AUX	 Shift + Power
 Red/Presets	 Shift + Red
 Green/List AUX	 Shift + Green
 Yellow/Info AUX	 Shift + Yellow
 Blue/Guide AUX	 Shift + Blue
 Up AUX	 Shift + Up
 OK AUX	 Shift + Ok
 Down AUX	 Shift + Down


Original	Sustituto
 Right/Zoom+	 Shift + Right
 Left/Zoom- AUX	 Shift + Left
 Exit AUX	 Shift + Exit
 Menu AUX	 Shift + Menu
 Violet/Text AUX	 Shift + Text
 Return AUX	 Shift + Back
 PR+ AUX	 Shift + Ch +
 PR- AUX	 Shift + Ch -
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4
 5 AUX	 Shift + 5
 6 AUX	 Shift + 6
 7 AUX	 Shift + 7
 8 AUX	 Shift + 8
 9 AUX	 Shift + 9



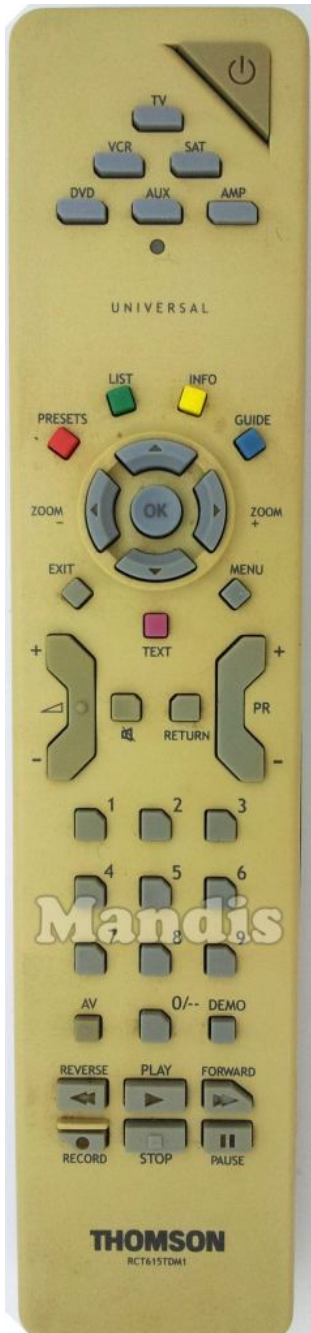 

Original	Sustituto	Original	Sustituto
Power DVD	Power	PR+ DVD	Ch +
Red/Presets	Red	PR- DVD	Ch -
Green/List DVD	Green	1 DVD	1
Yellow/Info DVD	Yellow	2 DVD	2
Blue/Guide DVD	Blue	3 DVD	3
Violet/Text DVD	Text	4 DVD	4
Up DVD	Up	5 DVD	5
Down DVD	Down	6 DVD	6
Right/Zoom+	Right	7 DVD	7
Left/Zoom- DVD	Left	8 DVD	8
OK DVD	Ok	9 DVD	9
Exit DVD	Exit	0 DVD	0
Menu DVD	Menu	AV DVD	AV
Vol+	Vol +	Demo DVD	Pre Ch
Vol-	Vol -	Play DVD	Play
Mute	Mute	<< DVD	<<
Return DVD	Back	>> DVD	>>




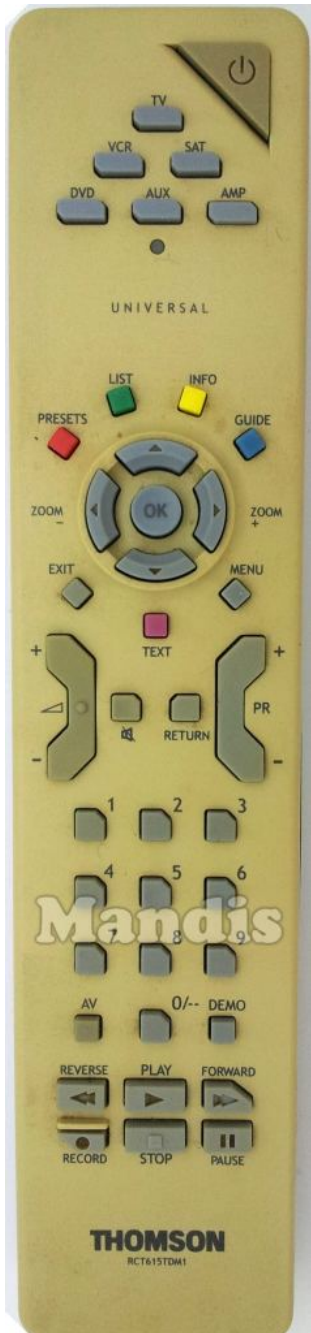  



 
 




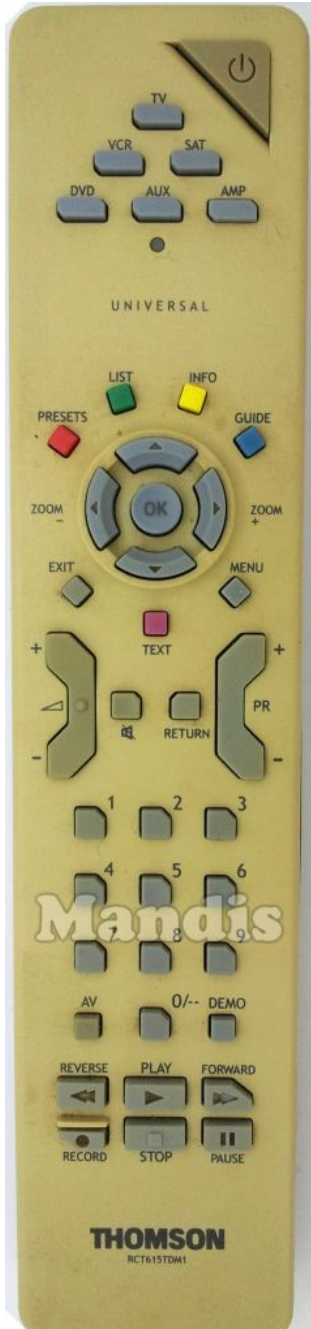








 













 



 

 
 
 
 

 

 



Original	Sustituto
Record DVD	Rec
Stop DVD	Stop
Pause	Pause
TV	TV/R
VCR	Smart
SAT	Media
DVD	Options
AUX	Format
AMP	3D
Power VCR	Shift + Power
Red/Presets	Shift + Red
Green/List VCR	Shift + Green
Yellow/Info VCR	Shift + Yellow
Blue/Guide VCR	Shift + Blue
Violet/Text VCR	Shift + Text
Exit VCR	Shift + Exit
Menu VCR	Shift + Menu


Original	Sustituto
Up VCR	Shift + Up
Down VCR	Shift + Down
Right/Zoom+	Shift + Right
Left/Zoom- VCR	Shift + Left
OK VCR	Shift + Ok
Return VCR	Shift + Back
PR+ VCR	Shift + Ch +
PR- VCR	Shift + Ch -
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9











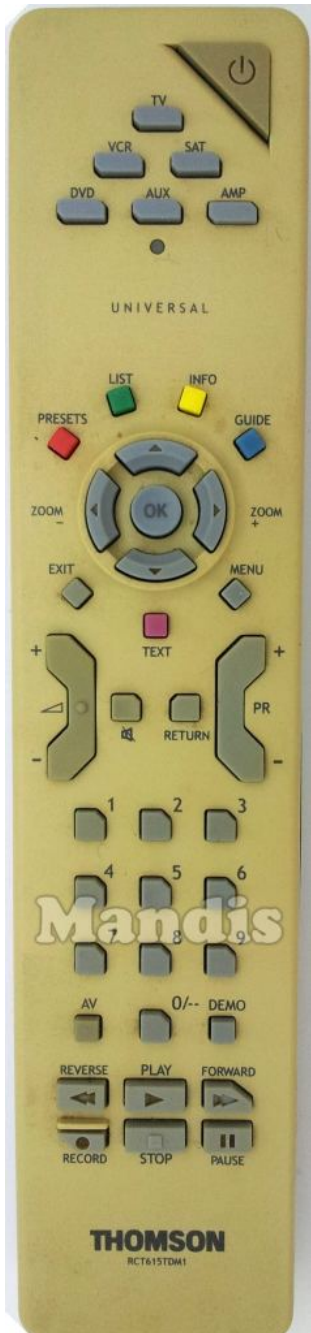   




























 




 
 
 

 
 
 
 
 

 
 
 

 
 
 
 





Original	Sustituto	Original	Sustituto
	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Green/List		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original	Sustituto	Original	Sustituto
	Power		Power
	TV		TV/R
	VCR		Smart
	SAT		Media
	DVD		Options
	AUX		Format
	AMP		3D
	Red/Presets		Red
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Text		Text
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



