



Original	Sustituto
Standby / On	Power
Function	Setup / OPT /
Display	Display / Media
I<<	I<< / Preset-
>>I	>>I / Preset+
Play / Pause	Pause / Step / Freeze
Play / Pause	Play / Slow
Folder Down	Down
Folder Up	Up
Stop	Stop / Hold
Sleep / Timer	Sleep / Timer
Sleep / Timer	Shift + Sleep / Timer
CLK-ADJ / MEM	Smart / List
Play Mode	Shift + Play /
FIND / TS	D.Menu / Top
DELETE / INFO	Shift + Info / Angle
DELETE / INFO	Info / Angle

Original	Sustituto
Volume-	Vol-
Volume+	Vol+
Preset EQ	Subtitle / EQ

