



Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Recall	 Back	 OK	 Ok
 EPG	 Guide	 Right	 Right
 Info	 Info	 Down	 Down
 1	 1	 PAL / NTSC	 Format
 2	 2	 FAV	 Pre Ch
 3	 3	 TV / Radio	 TV/R
 4	 4	 SAT	 Smart
 5	 5	 TV / AV	 AV
 6	 6	 Play / Pause	 Play
 7	 7	 Play / Pause	 Pause
 8	 8	 Zoom	 Eject
 9	 9	 Red / Audio	 Red
 0	 0	 Red / Audio	 Dual
 Menu	 Menu	 Green / Position	 Green
 Exit	 Exit	 Yellow / Text	 Yellow




 

 


 

 

 


 
 
Original	Sustituto	Original	Sustituto
 Up	 Up	 TV	 AUX
 Left	 Left	 DVD	 SAT
 OK	 Ok	 PLAY MODE	 REC MODE
 Right	 Right	 Play	 Pause
 Down	 Down	 Stop	 FF
 PAL / NTSC	 Format	 RR	 SOUND
 FAV	 Pre Ch	 AD	 SETTINGS
 TV / Radio	 TV/R	 LIST	 DUAL
 SAT	 Smart	 SUBT	 OPT
 TV / AV	 AV	 PROG	 ECO
 Play / Pause	 Play	 SLEEP	 TV/R
 Play / Pause	 Pause	 FORMAT	 3D
 Zoom	 Eject	 E-MANUAL	 REPEAT
 Red / Audio	 Red	 ZOOM	 TIMER
 Red / Audio	 Dual	 D.MENU	 TEXT
 Green / Position	 Green	 TOP MENU	 INFO
 Yellow / Text	 Yellow	 MENU	 OK

 
 


 

 


 

 
 


 
 









Original	Sustituto	Sustituto
Power		Power
Mute		Mute
TV / AV		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Recall		Back
SAT		Smart
Menu		Menu
EPG		Guide

Original	Sustituto	Sustituto
Info		Info
Exit		Exit
Up		Up
Left		Left
OK		Ok
Right		Right
Down		Down
Vol+		Vol +
Vol-		Vol -
Page+		Ch +
Page-		Ch -
Red / Audio		Red
Red / Audio		Dual
Green / 		Green
Yellow / Text		Yellow
Yellow / Text		Text
Blue / Find		Blue



