



Original	Sustituto
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Sustituto
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





Original	Sustituto	Original	Sustituto
[≡o]	Sleep / Timer		
Hold	Stop / Hold		
[≡X]	Exit / Cancel / Clear		
Mix / PIP Swap	Smart / List		
PIP / Size	Zoom / Size		
PIP Down / [≡?]	I<< / Preset-		
PIP Up / Index	>>I / Preset+		
[TV]	TV/Radio /		
[AV]	AV / Input / RDS		

Original	Sustituto

