

 

 


 
 




 
 





 

 
 
 











 

 









 

 



 

 

 



Original	Sustituto
	Power
	Mute
	Nicam/A2
	Aspect
	P.Mode
	S.Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Sustituto
	Recall
	Display
	Freeze
	Rec/Auto
	Red
	Green
	Yellow
	Blue
	Sleep
	Up
	Source
	Left
	Enter
	Right
	Down
	Menu
	Exit





Original		Sustituto		Original		Sustituto	
	CH+		CH+ / Page+		DTV		Smart / List
	Subtitle		Subtitle / EQ		EPG		Guide / EPG / -/-
	Vol+		Vol+		Tv/Radio		TV/Radio /
	CH-		CH- / Page-				
	T.Shift		Setup / OPT /				
	Vol-		Vol-				
	Play/Pause/Hold		Play / Slow				
	Play/Pause/Hold		Shift +				
	Play/Pause/Hold		Stop /				
	<</Reveal		<< / Tune-				
	>>/Size		Zoom / Size				
	>>/Size		>> / Tune+				
	Stop/Index		Stop / Hold				
	I<<		I<< / Preset-				
	S.Page/>>I		>>I / Preset+				
	Text		Text / Goto				
	FAV		Fav / Marker / PC				
	Audio		Audio / Lang I/II				

