





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ATV/DTV	 Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 MTS	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 Vol+	 Vol+
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Rec / Rec Mode
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 FAV List	 Smart / List





Original	Sustituto
 CH-	 CH- / Page-
 Play/Time Shift	 Play / Slow
 Pause	 Pause / Step / Freeze
 <</Guide	 << / Tune-
 >>/Aspect	 >> / Tune+
 Freeze	 Shift + Pause / Step /
 Stop/Index	 Stop / Hold
  <</Cancel	  << / Preset-
 >> /Sub.PG	 >>  / Preset+
 Subtitle	 Subtitle / EQ
 Reveal	 Setup / OPT /
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Sustituto
 Cyan	 Blue / Prime Video / Random

