



Original	Sustituto
 Power	 Power
 TXT	 Text / Goto
 MIX	 Smart / List
 Size	 Zoom / Size
 Index	 Info / Angle
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subcode	 Display / Media
 Cancel	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Red/P.M.	 Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Yellow/Sleep	 Yellow / YouTube / Repeat
 Green/S.M.	 Green / APP / Repeat
 CH-	 CH- / Page-
 Vol-	 Vol-
 Blue/Call	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Select	 OK





Original	Sustituto	Original	Sustituto
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Mute		Mute / Dimmer
	Aspect		Picture / Format
	Setup/Freeze		Setup / OPT /
	Subtitle/I/II		Subtitle / EQ
	Display/FAV		Fav / Marker / PC
	Search/FAV+/-		TV/Radio /
	Setup/EPG		Guide / EPG / --
	Audio		Audio / Lang I/II
	Title		Sound / Title
	DVD		Shift + 2
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround

