



| Original | Sustituto |
|----------------|-----------------------|
| Open/Close | Eject / Surround |
| Power | Power |
| VCR | Shift + 4 |
| DVD | Shift + 2 |
| TV / VCR | TV/Radio / |
| TV / View | Smart / List |
| 2 | 2 |
| 4 | 4 |
| 1 / Tracking - | 1 |
| 5 | 5 |
| 3 / Tracking + | 3 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Clear | Exit / Cancel / Clear |
| 0 | 0 |

| Original | Sustituto |
|----------|-----------------------------|
| P.Scan | Blue / Prime Video / Random |
| Menu | Menu / Home |
| Setup | Setup / OPT / |
| Up | Up |
| PR+ | CH+ / Page+ |
| PR- | CH- / Page- |
| Down | Down |
| Left | Left |
| Right | Right |
| Enter | OK |
| Edit | Fav / Marker / PC |
| Display | Display / Media |
| I<< | I<< / Preset- |
| I>> | I>> / Preset+ |
| Pause | Pause / Step / Freeze |
| Play | Play / Slow |
| << | << / Tune- |





| Original | Sustituto |
|----------------|-----------------------|
| Open/Close | Eject / Surround |
| Power | Power |
| VCR | Shift + 4 |
| DVD | Shift + 2 |
| TV / VCR | TV/Radio / |
| TV / View | Smart / List |
| 2 | 2 |
| 4 | 4 |
| 1 / Tracking - | 1 |
| 5 | 5 |
| 3 / Tracking + | 3 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Clear | Exit / Cancel / Clear |
| 0 | 0 |

| Original | Sustituto |
|----------|-----------------------------|
| P.Scan | Blue / Prime Video / Random |
| Menu | Menu / Home |
| Setup | Setup / OPT / |
| Up | Up |
| PR+ | CH+ / Page+ |
| PR- | CH- / Page- |
| Down | Down |
| Left | Left |
| Right | Right |
| Enter | OK |
| Edit | Fav / Marker / PC |
| Display | Display / Media |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Pause | Pause / Step / Freeze |
| Play | Play / Slow |
| << | << / Tune- |



