








 




























Original	Sustituto
 Up	 Up
 Page+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Page-	 CH- / Page-
 Down	 Down
 Power	 Power
 1	 1
 2	 2
 3	 3
 Menu	 Menu / Home
 4	 4
 5	 5
 6	 6

Original	Sustituto
 []	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 0	 0
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Woofer	 Setup / OPT /
 (())	 Sound / Title
 Audio	 Audio / Lang I/II
 Index	 Info / Angle
 Normal	 Smart / List
 Recall	 Back / Return
 System	 D.Menu / Top
 Time	 Shift + Sleep / Timer



