

 

 

 

 

 

 

 

 
 


 

 

 
 




 



 

 
 
 
 

 


 



 

 

 

 

 
 
 


 
 









Original	Sustituto	Original	Sustituto
 On	 Shift + Power	 Mode	 Format
 Standby	 Power	 CH+	 Ch +
 Sleep	 Sleep	 CH-	 Ch -
 Dimmer	 Smart	 Tuning Up	 Shift + Ch +
 Status	 Options	 Tuning Down	 Shift + Ch -
 Search	 TV/R	 Quick Select 1	 Shift + 1
 BD	 1	 Quick Select 2	 Shift + 2
 Tuner	 2	 Quick Select 3	 Shift + 3
 Band	 3	 Quick Select 4	 Shift + 4
 DVD	 4	 Menu	 Menu
 Dock	 5	 Audio Adjust	 Dual
 Shift	 6	 Vol+	 Vol +
 TV	 7	 Vol-	 Vol -
 Game	 8	 Up	 Up
 SAT/CBL	 9	 Down	 Down
 V.AUX	 0	 Right	 Right
 Memory	 Subt	 Left	 Left





Original		Sustituto		Original		Sustituto	
	Enter		Ok		Repeat Ipod		Text
	CH Level		Media		Random Ipod		Info
	Return		Back				
	Night		3D				
	Restorer		Exit				
	Tone		List				
	Mute		Mute				
	Surround Left		Shift + Left				
	Surround Right		Shift + Right				
	Audio Delay -		Shift + Vol -				
	Audio Delay +		Shift + Vol +				
	I<< Ipod		I<<				
	Stop Ipod		Stop				
	Play/Pause Ipod		Play				
	>>I Ipod		>>I				
	<< Ipod		<<				
	>> Ipod		>>				

