







Original	Sustituto	Original	Sustituto
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Right		Right
	Down / P-		Down
	Down / P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--		Guide / EPG / -/--
	0		0
	P < P		Fav / Marker / PC
	PP		Back / Return
	Vol+		Vol+
	I-II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[TV]		Shift + 1
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS
	[≡]		Text / Goto


 


 





 

 
 



 
 

 

 

















	Original	Sustituto	Original	Sustituto
	[≡☉]	 Subtitle / EQ		
	[/ ≡]	 Picture / Format		
	[≡X]	 Exit / Cancel / Clear		
	[≡⇕]	 Zoom / Size		
	[≡?]	 Display / Media		
	[≡i]	 Smart / List		






Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+


















 




















Original	Sustituto	Original	Sustituto
	◀◀		I<< / Preset-
	▶▶		>>I / Preset+
	▶/ 		Play / Slow
	▶/ 		Pause / Step / Freeze
	■		Stop / Hold
	Title		Sound / Title
	Open / Close		Eject / Surround

Original	Sustituto





 


Original	Sustituto	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Sustituto	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original	Sustituto	Original	Sustituto
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 +  Shift + Audio / Lang I/II		

Original	Sustituto

