



| Original | Sustituto |
|----------|--------------------|
| PP | Back / Return |
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| P<P | Fav / Marker / PC |
| 0 | 0 |
| -- | Guide / EPG / -/-- |
| M | Menu / Home |
| i | Info / Angle |
| I-II | Audio / Lang I/II |

| Original | Sustituto |
|------------------|-----------------------------|
| Mute | Mute / Dimmer |
| Left | Left |
| Up | Up |
| Right | Right |
| OK | OK |
| Down | Down |
| V - | Vol- |
| V + | Vol+ |
| P - | CH- / Page- |
| P + | CH+ / Page+ |
| Red / Sound | Red / Netflix / Search |
| Red / Sound | Sound / Title |
| Green / Picture | Green / APP / Repeat |
| Green / Picture | Picture / Format |
| Yellow / Feature | Yellow / YouTube / Repeat |
| Blue / Install | Blue / Prime Video / Random |
| Text | Text / Goto |





| Original | Sustituto | Original | Sustituto |
|-----------------|-----------------------|----------|-----------|
| [≡o] | Sleep / Timer | | |
| Hold | Stop / Hold | | |
| [≡X] | Exit / Cancel / Clear | | |
| Mix / PIP Swap | Smart / List | | |
| PIP / Size | Zoom / Size | | |
| PIP Down / [≡?] | I<< / Preset- | | |
| PIP Up / Index | >>I / Preset+ | | |
| [TV] | TV/Radio / | | |
| [AV] | AV / Input / RDS | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

