
 







 
 





 

 





Original	Sustituto
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu [M]
	Info [i]
	I-II

Original	Sustituto
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Prime Video / Random
	Text / Goto



