



 

 


 





 





 

 





 

 


 
 





 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Sustituto
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Source	 AV
 EPG	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Original	Sustituto
 Yellow	 Yellow
 Blue	 Blue
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Tv/Radio	 TV/R
 Subpage	 Eject
 Subtitle	 Subt
 Reveal	 3D
 Audio	 Dual
 Size	 Format
 Hold	 Options

Original	Sustituto
 Index	 List
 Home	 Smart

