






 





 

 

 


 
 



 





 

 




Original	Sustituto	Original	Sustituto
 POWER	Power	 POWER	Power
 MUTE	Mute	 MUTE	Mute
 PAUSE	Pause	 PAUSE	Pause
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 Recall	Recall	 RETURN BACK	Back
 SCAN	Scan	 HOME SMART	Smart
 MENU	Menu	 TOP MENU MENU	Menu
 MP	MP	 APP MEDIA	Media

Original	Sustituto	Original	Sustituto
 INFO	Info	 DISPLAY INFO	Info
 EXIT	Exit	 CLEAR EXIT	Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
 OK	OK	 OK	Ok
 PAGE+	Page+	 + CH	Ch +
 PAGE-	Page-	 - CH	Ch -
 VOL+	Vol+	 + VOL	Vol +
 VOL-	Vol-	 - VOL	Vol -
 FAV	FAV	 FAV PRE-CH	Pre Ch
 FAV	Red	 A	Red
 SAT	Green	 B	Green
 AUDIO	Yellow	 C	Yellow
 TV/RADIO	Blue	 D	Blue
 SAT	SAT	 SETTINGS OPT	Options





Original	Sustituto	Original	Sustituto
 AUDIO	Audio	 SOUND DUAL	Dual
 TV/RADIO	Tv/Radio	 SEARCH TV/R	TV/R

