









 





 





| Original | Sustituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  TV |  Shift + 1 |
|  Timer |  Sleep / Timer |
|  Lock |  Smart / List |
|  Index |  Info / Angle |
|  Mix |  Text / Goto |
|  FAV/Main |  Fav / Marker / PC |
|  Radio |  TV/Radio / |
|  Left |  Left |
|  Up |  Up |
|  Store |  OK |
|  Right |  Right |
|  Down |  Down |
|  Channel- |  CH- / Page- |
|  Channel+ |  CH+ / Page+ |
|  1 |  1 |

| Original | Sustituto |
|---|---|
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

