







 




Original	Sustituto
Standby	Power
Subtitle	Subtitle / EQ
Language	Audio / Lang I/II
Open/Close	Eject / Surround
Angle	Info / Angle
Title	Sound / Title
Vol+	Vol+
Prog	TV/Radio /
Menu	Menu / Home
Vol-	Vol-
Setup	Setup / OPT /
Up	Up
Play	Play / Slow
Pause	Pause / Step / Freeze
Left	Left
Enter	OK
Right	Right

Original	Sustituto
L/R	Smart / List
Down	Down
Stop	Stop / Hold
1	1
2	2
3	3
Goto	Text / Goto
4	4
5	5
6	6
10+	Guide / EPG / -/-
7	7
8	8
9	9
0	0
<<	<< / Tune-
>>	>> / Tune+





Original	Sustituto
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 PBC	 Back / Return
 Display	 Display / Media
 Zoom	 Zoom / Size
 Slow	 +  Shift + Play /
 Mute	 Mute / Dimmer
 A-B	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 Video Mode	 AV / Input / RDS

Original	Sustituto

