



Original	Sustituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
V+	Vol+
Mute	Mute / Dimmer
P+	CH+ / Page+

Original	Sustituto
V-	Vol-
World/Internet	Smart / List
P-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Music/Camera	Display / Media
TV Guide	Guide / EPG / -/-
*/O	Shift + 1
*/Q	Shift + 2





	Original	Sustituto	Original	Sustituto
	[≡]/Text	GOTO TEXT		Text / Goto
	Red	NETFLIX SEARCH		Red / Netflix / Search
	Green	APP REPEAT		Green / APP / Repeat
	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM		Blue / Prime Video / Random
	Lang	LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	TITLE SOUND		Sound / Title
	[-O-]	OPT-TOOLS SETUP		Setup / OPT /
<< button icon"/>	<<	TUNE-		<< / Tune-
	Pause	STEP-FREEZE		Pause / Step / Freeze
	>>	TUNE+		>> / Tune+
	Rec	REC MODE		Rec / Rec Mode
	Play	SLOW		Play / Slow
	Stop	HOLD		Stop / Hold

