


 

 













 




 



 

 









 
 









 



 




 



 



Original	Sustituto
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- / Page-

Original	Sustituto
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BUE	 Sound / Title
 TITLE/BUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





Original	Sustituto
	VOL  Vol-
	VOL  Vol+
	PC FAV MARKER  Fav / Marker / PC
	LANG I/II  Audio / Lang I/II
	EQ  Subtitle / EQ
	DIMMER MUTE  Mute / Dimmer
	SHIFT +  RETURN  Shift + Back / Return
	GUIDE EPG  Guide / EPG / -/-
	TOP MENU D.MENU  D.Menu / Top
	GOTO TEXT  Text / Goto
	CLEAR  EXIT  Cancel / Clear
	MEDIA DISPLAY  Display / Media
	SHIFT +  ANGLE  Shift + Info / Angle
	SHIFT +  NETFLIX  Shift + Red / Netflix /
	REC MODE  Rec / Rec Mode
	HOLD  Stop / Hold
	SLOW  Play / Slow

Original	Sustituto
	STEP - FREEZE  Pause / Step / Freeze
	TUNE-  << / Tune-
	TUNE+  >> / Tune+
	PRESET-  I<< / Preset-
	PRESET+  >>I / Preset+

