

 
 


 
 
 

 
 





 




 
 
 

 
 
 




 


 

 
 

 




 

 





 


 




 

 







 

 



 



 










 



 
 
 


Original	Sustituto
	 Power
	 Info
	 Mute
	 Dual
	 Ok
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide
	 Exit

Original	Sustituto
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<


 




Original	Sustituto	Original	Sustituto
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡♦]/Wide		Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[::]/Subtitle		Back



 
 

 
 













 
 


Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Guide
 Exit	 Exit
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Shift + Yellow
 Blue/Angle	 Blue

Original	Sustituto
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 D-Menu	 Smart
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 Time	 Shift + AV
 Zoom	 Shift + Eject
 Program	 Sleep
 Search Mode	 AV
 Repeat	 Text
 A-B	 Shift + Play
 C	 Yellow
 Title	 Info
 Display	 Shift + Info





Original		Sustituto		Original		Sustituto	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

