







 









 





















































Original	Sustituto
	 Power
	 Red / Netflix / Search
	 Mute / Dimmer
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Exit / Cancel / Clear
	 Display / Media
	 Back / Return
	 Shift + TV/Radio / Program
	 Audio / Lang I/II
	 Text / Goto
	 AV / Input / RDS
	 Up
	 CH+ / Page+
	 Down

Original	Sustituto
	 CH- / Page-
	 Right
	 Left
	 Vol-
	 Menu / Home
	 OK
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/-
	 0





Original	Sustituto
	+ Shift + Back / Return
	Smart / List
	Eject / Surround
	Stop / Hold
	Pause / Step / Freeze
	Zoom / Size
	Setup / OPT /
	TV/Radio /
	+ Shift + Zoom /
	Subtitle / EQ
	D.Menu / Top
	Sound / Title
	Picture / Format

Original	Sustituto

