


 
 
 
 
 
 
 

 

 
 
 


 
 
 
 




 
 
 
 



 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/10+	 Shift + Guide
 Recall	 Back
 Subtitle	 Subt
 P.Mode	 Shift + Format
 S.Mode	 Dual

Original	Sustituto
 MTS	 Media
 Sleep	 Sleep
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Info	 Info
 Freeze	 Red
 CH.List	 List
 Auto	 Yellow
 Aspect	 Format
 Up	 Up
 Down	 Down
 OK	 Ok
 Right	 Right
 Left	 Left





Original	Sustituto
Menu	Menu
Exit	Exit
CC	Smart
Eject / V-Chip	Eject
Play/Pause / FAV	Play
Play/Pause / FAV	Pre Ch
Stop/ADD/Erase	Stop
Title	Options
Setup/EPG	Guide
Audio	Shift + Dual
Goto	TV/R
A-B	Shift + Text
Menu (lower)	D. Menu
Slow	Pause
Repeat	Text
I<<	I<<
>>I	>>I

Original	Sustituto
<<	<<
>>	>>

