 




 



 

 




 



 
 




 
 










Original	Sustituto
 Power	 Power
 Source	 AV
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -

Original	Sustituto
 Menu	 Menu
 Ch +	 Ch +
 Ch -	 Ch -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Red/Image	 Red
 Green/Audio	 Green
 Yellow/Sleep	 Yellow
 Blue/Freeze	 Blue
 ←	 Media
 →	 Smart



