 




 












 




 

 

 

 

 

 




Original	Sustituto
 Power	 Power
 16:9 Wide	 Format
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 F1	 Shift + 1
 Guide	 Smart
 Smart S	 Dual
 Smart P	 Options

Original	Sustituto
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 Menu	 Menu
 Source	 AV
 CH +	 Ch +
 CH -	 Ch -
 Info	 Info
 Sleep	 Sleep
 Recall	 Back
 L / R	 Shift + Dual
 Play / Index	 Play
 Pause / Zoom	 Pause





Original	Sustituto	Original	Sustituto
 Pause / Zoom	 Eject		
 Stop / Reveal	 Stop		
 TTX	 Text		
 I<< / Hold	 I<<		
 >>I / List	 >>I		
 << / Language	 <<		
 >> / Radio	 >>		
 >> / Radio	 TV/R		
 Red / Rec	 Red		
 Red / Rec	 Rec		
 >>I / List	 List		
 Green / Subtitle	 Green		
 Green / Subtitle	 Subt		
 Yellow / FAV	 Yellow		
 Yellow / FAV	 Pre Ch		
 Blue / EPG	 Blue		
 Blue / EPG	 Guide		

