



























































 







Original	Sustituto
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV/SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Zoom	 Zoom / Size
 List	 Smart / List
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Timer	 Sleep / Timer
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Display / Media
 Mute	 Mute / Dimmer

Original	Sustituto
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Recall	 Back / Return
 P+	 >> / Preset+
 P-	 << / Preset-
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4






 




 




 





















 
Original	Sustituto

Original	Sustituto





Original	Sustituto	
Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Original	Sustituto	
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--





Original	Sustituto	Original	Sustituto
Power	Power	Recall	Back / Return
Mute	Mute / Dimmer	Vol+	Vol+
Pause	Pause / Step / Freeze	List	Smart / List
Audio	Audio / Lang I/II	P+	CH+ / Page+
Zoom	Zoom / Size	Vol-	Vol-
Timer	Sleep / Timer	M/P	Display / Media
Tv/Radio	TV/Radio /	P-	CH- / Page-
Text	Text / Goto	1	1
Tv/SAT	AV / Input / RDS	2	2
Menu	Menu / Home	3	3
Up/CH+	Up	4	4
Info	Info / Angle	5	5
Left	Left	6	6
OK	OK	7	7
Right	Right	8	8
Exit	Exit / Cancel / Clear	9	9
Down/CH-	Down	EPG	Guide / EPG / -/--

Original	Sustituto	Original	Sustituto
Power	Power	Recall	Back / Return
Mute	Mute / Dimmer	Vol+	Vol+
Pause	Pause / Step / Freeze	List	Smart / List
Audio	Audio / Lang I/II	P+	CH+ / Page+
Zoom	Zoom / Size	Vol-	Vol-
Timer	Sleep / Timer	M/P	Display / Media
Tv/Radio	TV/Radio /	P-	CH- / Page-
Text	Text / Goto	1	1
Tv/SAT	AV / Input / RDS	2	2
Menu	Menu / Home	3	3
Up/CH+	Up	4	4
Info	Info / Angle	5	5
Left	Left	6	6
OK	OK	7	7
Right	Right	8	8
Exit	Exit / Cancel / Clear	9	9
Down/CH-	Down	EPG	Guide / EPG / -/--



