



Original	Sustituto	Original	Sustituto
	Power		Power
	TV/RAD		TV/Radio /
	Input		AV / Input / RDS
	AV Mode		Picture / Format
	Energy Saving		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

Original	Sustituto	Original	Sustituto
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	PR-/Page Down		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green/Stop		Green / APP / Repeat
	Green/Stop		Stop / Hold
	Yellow/Play		Yellow / YouTube / Repeat
	Yellow/Play		Play / Slow





Original	Sustituto	Original	Sustituto
	Blue/Prime Video / Random		
	Pause / Step / Freeze		
	Text / Goto		
	Left / Preset-		
	Setup / OPT /		
	<< / Tune-		
	>> / Preset+		
	Subtitle / EQ		
	>> / Tune+		
	Sleep / Timer		
	D.Menu / Top		
	Info / Angle		
	Guide / EPG / -/--		
	Fav / Marker / PC		


