

 

 

 

 

 
 

 
 
 

 


 
 
 
 
 
 
 
 

 
 
 






Original	Sustituto
 Power	 Power
 Energy Saving	 3D
 AV Mode	 Shift + AV
 Input	 AV
 TV / Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Pre Ch

Original	Sustituto
 Vol +	 Vol +
 Vol -	 Vol -
 Fav Mark	 Shift + Pre Ch
 Ratio	 Format
 Mute	 Mute
 P + / Page +	 Ch +
 P - / Page -	 Ch -
 Menu	 Menu
 Guide	 Guide
 Q.Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 Info	 Info





Original		Sustituto		Original		Sustituto	
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	T.Opt		Options				
	Subtitle		Subt				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	<<		<<				
	<<		I<<				
	>>		>>				
	>>		>>I				
	Simplink		Smart				

