



Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / □	0
0 / □	Display / Media
Exit / TV/Radio	TV/Radio /
Exit / TV/Radio	Exit / Cancel / Clear
Mute	Mute / Dimmer
Vol-	Vol-
Vol+	Vol+

Original	Sustituto
i	Info / Angle
Back	Back / Return
●	Rec / Rec Mode
Menu	Menu / Home
Guide	Guide / EPG / -/-
P+	CH+ / Page+
P-	CH- / Page-
↑	Shift + CH+ /
↑	>> / Preset+
↓	Shift + CH- /
↓	<< / Preset-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Green / Option	Setup / OPT /



