 












 


 



 



 

















 

 









 
 


 













| Original | Sustituto | Original | Sustituto |
|--|---|--|---|
|  POWER |  Power |  9 wxyz |  9 |
|  ←○ |  Shift + Smart / List |  TV |  TV/Radio / |
|  ✱/0 |  Shift + Display / Media |  0 |  0 |
|  ✱/☐ |  Shift + Red / Netflix / |  ↻ |  Shift + Back / Return |
|  SOURCE |  AV / Input / RDS |  TV GUIDE |  Guide / EPG / -/- |
|  PRESETS |  Smart / List |  [≡] |  Text / Goto |
|  ≡ |  Setup / OPT / |  MENU |  Menu / Home |
|  ≡ |  Display / Media |  Q.MENU |  D.Menu / Top |
|  SLEEP |  Sleep / Timer |  UP |  Up |
|  1 . / @ |  1 |  LEFT |  Left |
|  2 abc |  2 |  OK |  OK |
|  3 def |  3 |  RIGHT |  Right |
|  4 ghi |  4 |  DOWN |  Down |
|  5 jkl |  5 |  BACK |  Back / Return |
|  6 mno |  6 |  →☐← |  Picture / Format |
|  7 pqrs |  7 |  EXIT |  Exit / Cancel / Clear |
|  8 tuv |  8 |  ✱FAV |  Fav / Marker / PC |





| Original | Sustituto |
|----------|---------------------------|
| VOL+ | Vol+ |
| MUTE | Mute / Dimmer |
| P+ | CH+ / Page+ |
| VOL- | Vol- |
| INFO | Info / Angle |
| P- | CH- / Page- |
| REC | Rec / Rec Mode |
| PLAY | Play / Slow |
| PAUSE | Pause / Step / Freeze |
| STOP | Stop / Hold |
| LANG. | Audio / Lang I/II |
| << | << / Tune- |
| >> | >> / Tune+ |
| [≡]... | Sound / Title |
| RED | Red / Netflix / Search |
| GREEN | Green / APP / Repeat |
| YELLOW | Yellow / YouTube / Repeat |

| Original | Sustituto |
|----------|-----------------------------|
| BLUE | Blue / Prime Video / Random |

