







 




 

 

 






 
 



 
 
 





 
 
 


 

 
 
 
 

 





 


 



 



 
 
 





 

 





Original	Sustituto	Original	Sustituto
 Power	 Power	 PR+	 Ch +
 Source	 AV	 PR-	 Ch -
 HDMI	 3D	 Mute	 Mute
 1	 1	 CH.List	 List
 2	 2	 Media.P	 Media
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 OK	 Ok
 0	 0	 Up	 Up
 TTX/MIX	 Text	 Down	 Down
 PRE-CH	 Pre Ch	 Right	 Right
 Vol+	 Vol +	 Left	 Left
 Vol-	 Vol -	 Red/A	 Red





Original	Sustituto	Original	Sustituto
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 Internet/@Tv	 Smart		
 S.Mode	 Shift + Dual		
 Alarm	 Sleep		
 Dual/I-II	 Dual		
 P.Size	 Format		
 Subt.	 Subt		
 <<	 <<		
 >>	 >>		
 Pause	 Pause		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

