






Original		Sustituto		Original		Sustituto	
	Power		Power		[O]/Repeat		Pre Ch
	Goto		Smart		Input		AV
	Eject		Eject		EPG/?/A-B		Guide
	Setup		Options		Vol+		Vol +
	Title		List		Vol-		Vol -
	Mute		Mute		P+		Ch +
	1		1		P-		Ch -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Zoom		Shift + Eject
	8		8		Menu		Menu
	9		9		←		Back
	0/FAV		0		i		Info
	16:9 / Angle		Format		Red		Red





Original	Sustituto	Original	Sustituto
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Play/Pause	 Play		
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 [...] / Double	 Subt		
 Audio / Update	 Dual		
 TXT	 Text		

