


 



 


 







 

 








 







 


 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 PMode	 Format
 SMode	 Shift + Dual
 I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 -/--	 Shift + Guide
 TV Menu	 Menu
 DVB Menu	 D. Menu
 D.Exit	 Exit
 QV	 Pre Ch
 Call	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 V-	 Vol -
 V+	 Vol +
 P-	 Ch -
 P+	 Ch +
 Red	 Red
 Green	 Green





Original	Sustituto	Original	Sustituto
 Yellow	 Yellow		
 Blue	 Blue		
 Subtitle	 Subt		
 Size	 3D		
 Hold	 Stop		
 Reveal	 Smart		
 TV / Text	 Text		
 Index	 Shift + Info		
 Cancel	 Shift + Back		
 Mix	 Shift + Text		
 Subpage	 Shift + Subt		
 FAV	 Shift + Pre Ch		
 Info	 Info		
 Language	 Options		
 TV / Radio	 TV/R		
 EPG	 Guide		

Original	Sustituto

