























 













Original	Sustituto
	 Mute / Dimmer
	 Power
	 Back / Return
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Menu / Home

Original	Sustituto
	 Info / Angle
	 Left
	 Up
	 CH+ / Page+
	 Right
	 Down
	 CH- / Page-
	 Vol-
	 Vol+
	 Red / Netflix / Search
	 Sound / Title
	 Green / APP / Repeat
	 Picture / Format
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 AV / Input / RDS





Original	Sustituto	Original	Sustituto
[≡]	GOTO TEXT Text / Goto		
[/≡]	SHIFT + GOTO TEXT Shift + Text /		
[≡o]	TIMER SLEEP Sleep / Timer		
[≡+]	HOLD Stop / Hold		
[≡x]	OPT-TOOLS SETUP Setup / OPT /		
[≡◆]	SIZE ZOOM Zoom / Size		
[≡?]	LIST SMART Smart / List		
[≡i]	MEDIA DISPLAY Display / Media		

