



| Original | Sustituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute |
|  Menu |  Menu |
|  1 / Disc 1 |  1 |
|  2 / Disc 2 |  2 |
|  3 / Disc 3 |  3 |
|  4 / Disc 4 |  4 |
|  5 / Disc 5 |  5 |
|  6 |  6 |
|  7 / Angle |  7 |
|  8 |  8 |
|  9 / Night DVD |  9 |
|  0 / -- |  0 |
|  Aux 1 / SAT / |  AV |
|  Aux 2 / VCR |  Shift + AV |
|  Tuner |  Shift + TV/R |
|  TV |  TV/R |

| Original | Sustituto |
|---|--|
|  DVD / CD |  Media |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  >>I |  >>I |
|  I<< |  I<< |
|  Up |  Up |
|  Right |  Right |
|  Down |  Down |
|  Left |  Left |
|  OK / Save |  Ok |
|  Return |  Back |
|  Clear / Sleep |  Sleep |
|  Play Mode |  Shift + Play |
|  Pause |  Pause |
|  Stop |  Stop |
|  Rec / Zoom |  Rec |
|  << REV |  << |



