







 

 



 

 

 

 

 




















 











| Original   | Sustituto   |
|--|---|
|  Power      |  Power                       |
|  Source     |  AV / Input / RDS            |
|  Nicam / A2 |  Shift + Audio / Lang I/II   |
|  Aspect     |  Zoom / Size                 |
|  P.Mode     |  Picture / Format            |
|  S.Mode     |  Sound / Title               |
|  1          |  1                           |
|  2          |  2                           |
|  3          |  3                           |
|  4          |  4                           |
|  5         |  5                          |
|  6        |  6                         |
|  7        |  7                         |
|  8        |  8                         |
|  9        |  9                         |
|  --/      |  Shift + Guide / EPG / --/ |
|  0        |  0                         |

| Original   | Sustituto   |
|--|---|
|  Recall     |  Back / Return               |
|  FAV        |  Fav / Marker / PC           |
|  Freeze     |  Pause / Step / Freeze       |
|  TV / Radio |  TV/Radio /                  |
|  Red        |  Red / Netflix / Search      |
|  Green      |  Green / APP / Repeat        |
|  Yellow     |  Yellow / YouTube / Repeat   |
|  Blue       |  Blue / Prime Video / Random |
|  Sleep      |  Sleep / Timer               |
|  Up         |  Up                          |
|  EPG       |  Guide / EPG / --/          |
|  Left     |  Left                      |
|  OK       |  OK                        |
|  Right    |  Right                     |
|  Menu     |  Menu / Home               |
|  Down     |  Down                      |
|  Exit     |  Exit / Cancel / Clear     |





| Original  | Sustituto   |
|---|---|
|  Vol+              |  Vol+                |
|  Info              |  Info / Angle        |
|  CH+               |  CH+ / Page+         |
|  Vol-              |  Vol-                |
|  Mute              |  Mute / Dimmer       |
|  CH-               |  CH- / Page-         |
|  Play/Pause / Hold |  Play / Slow         |
|  << / Reveal       |  << / Tune-          |
|  >> / Size         |  >> / Tune+          |
|  Stop / Index      |  Stop / Hold         |
|  I<<              |  I<< / Preset-      |
|  >>I / S.Page    |  >>I / Preset+     |
|  TTX             |  Text / Goto       |
|  T.Shift         |  Setup / OPT /     |
|  Audio           |  Audio / Lang I/II |
|  Subtitle        |  Subtitle / EQ     |
|  Rec / Auto      |  Rec / Rec Mode    |

| Original  | Sustituto  |
|---|--|
|  PVR |  Smart / List |

