



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Anyview Cast	Shift + Up
Anyview Cast Off	Shift + Down
TV	TV/Radio /
Source	AV / Input / RDS
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
DMP	Display / Media
Pause	Pause / Step / Freeze
FAV	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Original	Sustituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Menu	Menu / Home
HiSmart	Smart / List
Up	Up
Left	Left
OK	OK
Right	Right
Return	Shift + Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
CH.List	Shift + Smart / List
CH+	CH+ / Page+
Vol-	Vol-
EPG	Guide / EPG / -/-
CH-	CH- / Page-





Original	Sustituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
INFO	Info / Angle
0	0
PRE-CH	Back / Return
I/II LANG.	Audio / Lang I/II
P.MODE	Picture / Format
S.MODE	Sound / Title
SIZE	Zoom / Size
SUBT.	Subtitle / EQ

Original	Sustituto
TEXT	Text / Goto
INDEX	D.Menu / Top
SUB PAGE	Setup / OPT /

