

























 



 









































Original	Sustituto	Original	Sustituto
 Standby	 Power	 Menu	 Menu / Home
 USB/Card	 Shift + 8	 Setup	 Setup / OPT /
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Audio	 Audio / Lang I / II	 Title	 Sound / Title
 Subtitle	 Subtitle / EQ	 Left	 Left
 Search	 Red / Netflix / Search	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Enter	 OK
 3	 3	 Down	 Down
 4	 4	 << / Tune-	 << / Tune-
 5	 5	 >> / Tune+	 >> / Tune+
 6	 6	 I<< / Preset-	 I<< / Preset-
 7	 7	 >>I / Preset+	 >>I / Preset+
 8	 8	 Step	 Pause / Step / Freeze
 9	 9	 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear	 Play/Pause	 Play / Slow
 0/10	 0	 Vol+	 Vol+

Original	Sustituto	Original	Sustituto
 Standby	 Power	 Menu	 Menu / Home
 USB/Card	 Shift + 8	 Setup	 Setup / OPT /
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Audio	 Audio / Lang I / II	 Title	 Sound / Title
 Subtitle	 Subtitle / EQ	 Left	 Left
 Search	 Red / Netflix / Search	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Enter	 OK
 3	 3	 Down	 Down
 4	 4	 << / Tune-	 << / Tune-
 5	 5	 >> / Tune+	 >> / Tune+
 6	 6	 I<< / Preset-	 I<< / Preset-
 7	 7	 >>I / Preset+	 >>I / Preset+
 8	 8	 Step	 Pause / Step / Freeze
 9	 9	 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear	 Play/Pause	 Play / Slow
 0/10	 0	 Vol+	 Vol+



