



Original	Sustituto	Original	Sustituto
Power	Power	Up	Up
1	1	Down	Down
2	2	Right	Right
3	3	Left	Left
4	4	OK	Ok
5	5	Red	Red
6	6	Green	Green
7	7	Yellow	Yellow
8	8	Blue	Blue
9	9	Vol+	Vol +
0	0	Vol-	Vol -
List	List	Mute	Mute
OPT	Options	CH+	Ch +
Back	Back	CH-	Ch -
Exit	Exit	Menu	Menu
EPG	Guide	TXT	Text
Info	Info	Tv/♪	TV/R





Original		Sustituto		Original		Sustituto	
* [Button]	*	ECO 3D [Button]	3D				
APP [Button]	APP	APP MEDIA [Button]	Media				
DISP [Button]	Disp	SHIFT + [Button]	DISP INFO [Button]	Shift + Info			

