





 





 

 

 

 
 





 
 

 




 
 



 

























 



 



Original	Sustituto
Power	Power
I<<	I<< / Preset-
Eject	Eject / Surround
<<	<< / Tune-
>>	>> / Tune+
>>	>>  / Preset+
Play/Pause	Play / Slow
TV/TXT /	Text / Goto
TV/TXT /	Audio / Lang I/II
Cancel / Zoom	Shift + Exit / Cancel / Clear
Cancel / Zoom	Shift + Zoom / Zoom /
Reveal / Subtitle	Shift + Subtitle / EQ
Stop	Stop / Hold
Hold / Menu	D.Menu / Top
Hold / Menu	Shift + Stop /
Size / Angle	Shift + Info / Angle
Subpage / Title	Shift + Sound / Title

Original	Sustituto
Index / Goto	Shift + Text /
Red/Program	Red / Netflix / Search
Red/Program	TV/Radio /
Green/Slow	Green / APP / Repeat
Green/Slow	Shift + Play /
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	Shift + Green / APP /
Blue/A-B	Blue / Prime Video / Random
Blue/A-B	Shift + Yellow / YouTube /
CH+	CH+ / Page+
TV Menu	Menu / Home
Vol+	Vol+
CH-	CH- / Page-
Source	AV / Input / RDS
Vol-	Vol-
DTV	Shift + 1
DVD Setup	Setup / OPT /





Original	Sustituto	Original	Sustituto
 Up	 Up	 0	 0
 Left	 Left	 Recall	 Back / Return
 OK	 OK	 Picture	 Picture / Format
 Right	 Right	 Sound	 Sound / Title
 Down	 Down	 I/II	 Shift + Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Mute	 Mute / Dimmer
 Display	 Display / Media	 Sleep	 Sleep / Timer
 1	 1	 Info	 Info / Angle
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Freeze	 Pause / Step / Freeze
 4	 4	 EPG	 Guide / EPG / -/-
 5	 5	 FAV List	 Smart / List
 6	 6	 FAV ADD	 Fav / Marker / PC
 7	 7	 FAV >>I	 Shift + Right
 8	 8	 Subtitle	 Subtitle / EQ
 9	 9	 Time	 Shift + Sleep / Timer
 -/-	 Shift + Guide / EPG / -/-	 Quick Start	 Shift + Smart / List

