















 

 

 

 

 

 

 


 

 

 



 

 

 










 












 



 


 




Original	Sustituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Audio I/II	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear














 

 




 

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH +	 CH+ / Page+
 Index	 Display / Media
 Vol +	 Vol+
 CH -	 CH- / Page-
 List	 Smart / List
 Vol -	 Vol-
 Fav	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search







Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 TV	 Left	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+ / Page+	 CH+ / Page+
 4	 4	 Display / Media	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH- / Page-	 CH- / Page-
 7	 7	 Smart / List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 0	 0	 Sleep / Timer	 Sleep / Timer
 SOURCE	 SOURCE	 Guide / EPG / -/-	 Guide / EPG / -/-
 AUDIO CO/II	 AUDIO	 Back / Return	 Back / Return
 MENU	 MENU	 Red / Netflix / Search	 Red / Netflix / Search
 EXIT	 EXIT	 << / Tune-	 << / Tune-



