



| Original | Sustituto | Original | Sustituto |
|--------------|----------------------------|----------|---------------------------|
| Standby | Power | NICAM | Shift + Audio / Lang I/II |
| Open/Close / | Eject / Surround | CH + | CH+ / Page+ |
| MUTE | Mute / Dimmer | VOL - | Vol- |
| 1 | 1 | DISPLAY | Display / Media |
| 2 | 2 | CH - | CH- / Page- |
| 3 | 3 | Up | Up |
| 4 | 4 | Left | Left |
| 5 | 5 | OK | OK |
| 6 | 6 | Right | Right |
| 7 | 7 | LCD MENU | Shift + Menu / |
| 8 | 8 | Down | Down |
| 9 | 9 | EXIT | Exit / Cancel / Clear |
| -/-- | Shift + Guide / EPG / -/-- | INPUT | AV / Input / RDS |
| 0 | 0 | P.MODE | Picture / Format |
| RECALL | Back / Return | S.MODE | Sound / Title |
| VOL + | Vol+ | SLEEP | Sleep / Timer |
| ASPECT | Shift + Picture / Format | FAV | Fav / Marker / PC |





| Original | Sustituto |
|-----------------|-------------------------|
| FAV - | Shift + CH- / |
| FAV + | Shift + CH+ / |
| EPG | Guide / EPG / -/-- |
| TEXT | Text / Goto |
| HOLD | Shift + Stop / |
| Subtitle | Subtitle / EQ |
| TV/RADIO | TV/Radio / |
| INDEX / D.DISP | Menu / Home |
| SIZE / ZOOM | Zoom / Size |
| REVEAL/ANGLE | Info / Angle |
| TITLE / Subpage | Shift + Sound / Title |
| D.MENU | D.Menu / Top |
| Audio | Audio / Lang I/II |
| Goto | Shift + Text / |
| Setup | Setup / OPT / |
| MEDIA | Shift + Display / Media |
| PLAY/PAUSE | Play / Slow |

| Original | Sustituto |
|---------------|-----------------------------|
| PLAY/PAUSE | Shift + Play / |
| << | << / Tune- |
| >> | >> / Tune+ |
| REC | Rec / Rec Mode |
| STOP | Stop / Hold |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| RED / Prog | Red / Netflix / Search |
| GREEN / Intro | Green / APP / Repeat |
| YELLOW / | Yellow / YouTube / Repeat |
| YELLOW / | Shift + Yellow / YouTube / |
| BLUE / A-B | Blue / Prime Video / Random |

